Installation Instructions for an Adhesive Door Stopper



What You Need

- Door stopper with a factory-applied adhesive pad or a separate pad from the kit.
- Isopropyl alcohol or degreaser, clean cloth, pencil.

Installation Instructions

1. Mark the Mounting Location

- Place a floor stopper approx. 5–10 cm from the edge of the door leaf and a wall stopper at handle height. Mark the spot with a pencil.

2. Prepare the Surface

- The surface must be smooth, dry, clean and degreased. Wipe it with alcohol and wait until it is dry.

3. Remove the Protective Liner

- Peel the liner off the adhesive pad without touching the adhesive.

4. Stick the Stopper On

- Place the stopper on the marked spot and press firmly for approx. 30 seconds.

5. Wait 24 Hours

- The adhesive reaches full strength after 24 hours. Only then let the door rest against the stopper.

Choosing the Surface

- **Tiles, stone, glass, metal, varnished wood:** the adhesive holds best.
- **Freshly painted walls:** wait at least 4 weeks after painting.
- **Wallpaper, plaster, carpet, oiled or waxed floors:** the adhesive will not hold – choose screw mounting if the model allows it.
- Install at 15–30°C. For heavy doors or strong draughts, screw mounting is better.

Care

- Clean with a soft, damp cloth with water or a neutral cleaner, then wipe dry. Do not use abrasive or alcohol-based products.

Online version: https://help.moodnook.com/hc/en-150/articles/52628696267025

Installing an adhesive door stopper

Step-by-step instructions

1 What you need



1. Stopper with adhesive pad

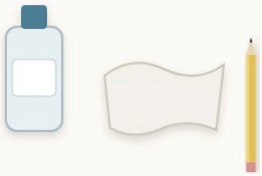

2. Isopropyl alcohol or degreaser, clean cloth, pencil

2 Step-by-step installation

1 Mark the spot

Open the door fully and mark a point 5–10 cm from the edge of the door leaf.

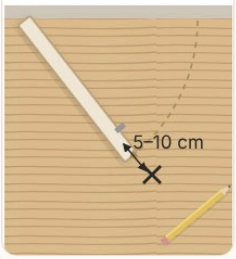

2 Degrease the surface

Wipe the spot with alcohol and wait until it is completely dry.

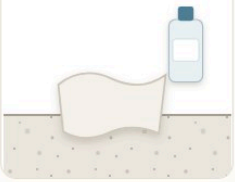

3 Remove the liner

Peel the protective liner off the adhesive pad. Do not touch the adhesive.

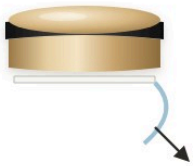

4 Press the stopper

Place the stopper on the marked spot and press firmly for approx. 30 seconds.

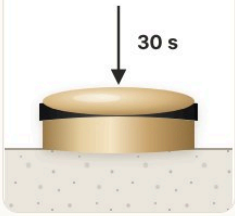

5 Wait 24 h

The adhesive reaches full strength after 24 hours. Use the stopper only then.



3 Choosing the surface

Tiles, stone, glass, metal — best adhesion – just degrease



Varnished wood — good adhesion; oiled or waxed floors – no



Fresh paint, wallpaper, plaster — the adhesive will not hold – choose screw mounting if the model allows it

Note: install at 15–30°C. For heavy doors or strong draughts, screw mounting is better.